


WCWH2050/WCWH3350

When using a wall hung frame it is necessary to reposition the fascia fixing clips. Please follow the instructions below.


1. ADJUST THE HEIGHT OF THE STRUCTURE

(recommended height = 805mm)


IT IS NECESSARY TO LINE PUSH BUTTON FROM CISTERN TO PRE-DRILLED HOLS ON TOP WC FASCIA

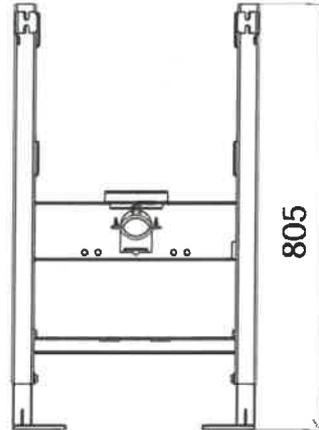


2. MOVE THE CLIPS FROM THE CARCASE TO THE FRAME

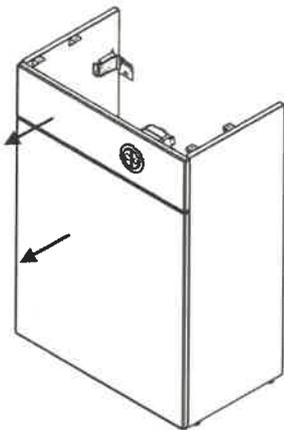


1. Remove all fascias

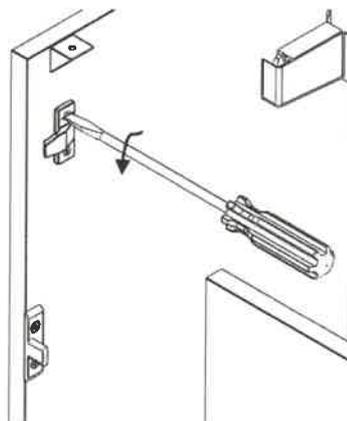

2. Loosen the clips off the carcass

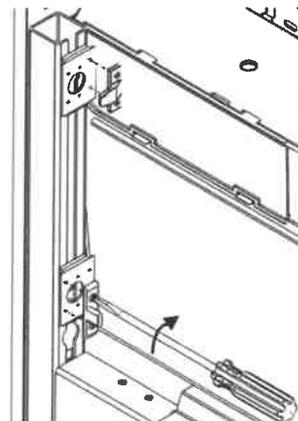


3. Refix the clips from the carcass onto the frame

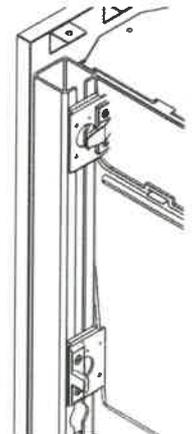


4. REFIT ALL FASCIAS


3. MOVE THE CLIPS FROM THE FASCIAS TO THE PREDRILLED FRAME LOCATIONS

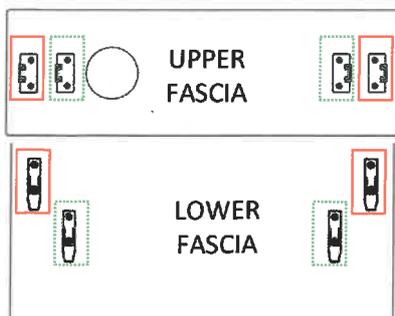

Delivery position
 Frame position

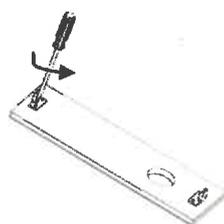

1. Loosen the clips off the fascias

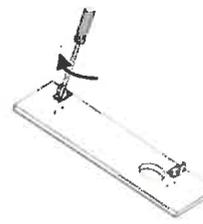

2. Refix the clips to the new locations

