
FITTING INSTRUCTION RGB MIRROR



Carefully inspect the mirror before installation. If there are any problems, report is immediately to your dealer as no claim for damage will be considered after installation. No claims for detects or damages will be accepted once the mirror has been installed

Mirrors are guaranteed for one year from date of invoice, no claim will be considered if product has not been installed and cared for as recommended in our fitting and care instructions. The mirror may have defects which are naturally associated to the product. The visual inspection must take place at minimum of 70 cm. If the defect is not visible at this distance the claim will

For claims about defect appearing over time (e.g de-silvering, ageing of glass etc.) the product must be inspected by a representative of AMBIANCE BAIN to clarify if there is a viable claim. The guarantee covers products in domestic use by the consumer only and not commercial or business use.

Liability is limited to individual products and does not cover consequential loss/damage or any further unfitting/refitting cost or financial compensation.

Installation must be made by a qualified professional, the guarantee will not apply if the product is incorrectly fitted

Maintenance:

For mirrors, use a chamois leather, and dry the edges with suitable soft cloth.

Use a dry cloth to clean any electric components, they must be switched off.

OUR MIRROR WILL DETERIORATE THROUGH EXCESSIVE WATER SPILLAGE OR HEAVY CONDENSATION. IT IS ADVISED THAT EVERY BATHROOM SHOULD BE WELL VENTILATED FITTED WITH A SUITABLE EXTRACTOR FAN TO AVOID ANY PERSISTENT HUMIDITY TO PRESERVE THEIR QUALITY.

Electrical installation:

Mirrors with electrical components must only be installed in ZONE 3. Installation and fitting of all electrical items must be completed by a qualified electrician. Any final decisions regarding the installation should also be made by the electrician. All electrical items must be tested prior to installation, as liability is limited to replacement items only.

All information is dowloadable from the website $\underline{\text{www.ambiancebain.com}}$






PREPARATION OF THE INSTALLATION AREA

Set up a protected installation area (blanket) Unpack carefully the mirror Be careful do not damage with the Stanley knife

Clean the mirror with a mild, non-greasy product on the front






1. DETERMINE THE FINISHED HEIGHT

2. FIX THE FIRST SCREW

3. THE SCREW MUST PROTRUDE MAXIMUM 8 MM FROM THE WALL

4. FIX THE SECOND SCREW ALIGNING IT WITH THE FIRST ONE

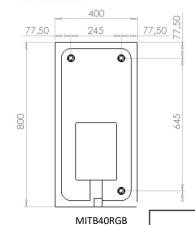





CAUTION:

Ensure that you use the correct fixing according to the type of wall construction

All dimensions are in mm.


Recommended height 1600 mm at the middle of the mirror

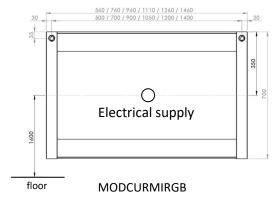

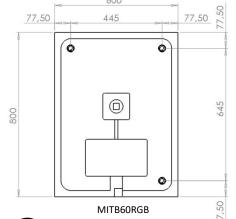


USING THE REMOTE CONTROL

VIEW THE PACKAGE LEAFLET

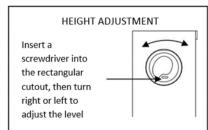

HANG THE MIRROR ON THE SCREWS

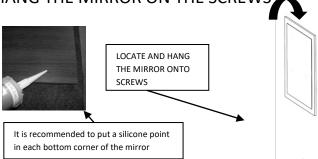

MITB40/60RGB



/ www.ambiancebain.co.uk